



**Instructions for dis-assembly and re-assembly of the Marshmallow Shooter for cleaning.**

Remove the magazine to access the other parts. This is accomplished by lifting the back of the magazine off the blue bracket "D" at the back of the shooter.

The front nozzle "A" can be rotated clockwise and removed for easy cleaning. When the nozzle is removed, the red plastic seat "B" that holds the magazine in place can be pushed out from the front by using a finger.

Re-assembly is in the reverse but please note the magazine "C" must be seated firmly into the front red plastic seat and then pushed into the blue bracket at the back of the shooter and in front of the blue tab "E". If the magazine is not inserted properly loss of compression will occur and the marshmallows won't shoot very far.

Use clean soapy water only and dry parts with soft cloth or paper towels.